




The Intelligent Surveillance Solution


# **NUUO MainConsole & CDVI Integration User Guide**

<The interface>

The three buttons stand for DVR configuration, live view, playback.

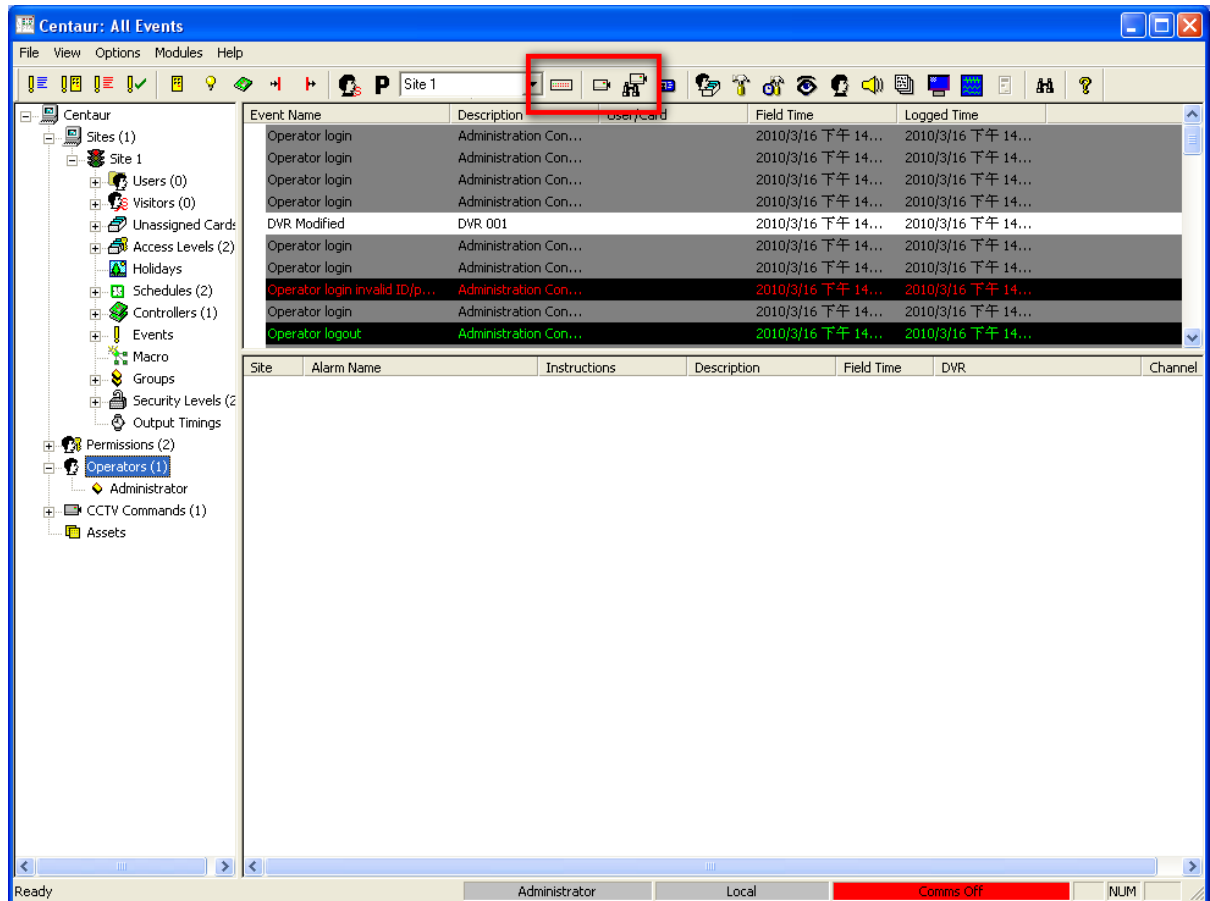


Click on add DVR or modify existing DVR settings.

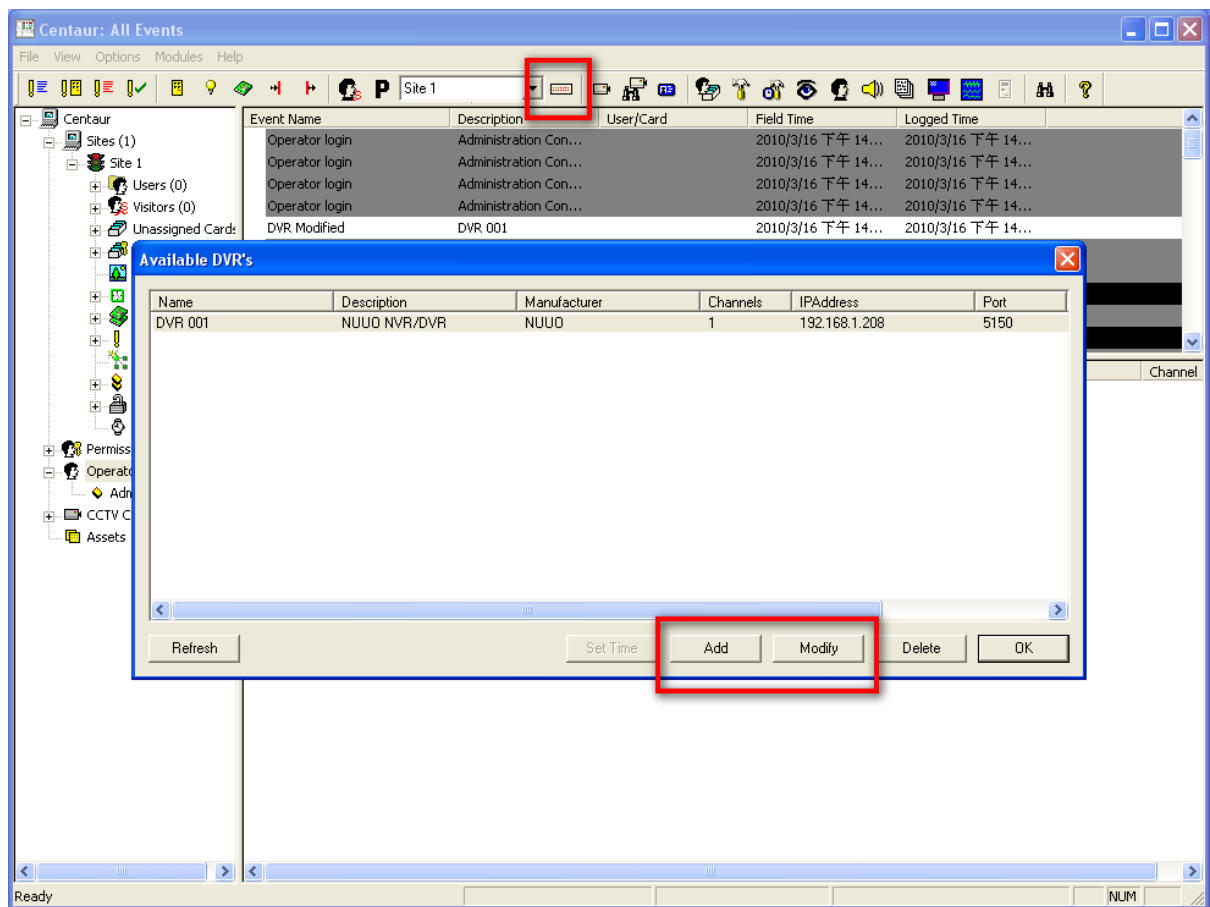


Update the name, description, IP address, and ports.


By default, 5150 is for remote live view and 5160 is for playback.

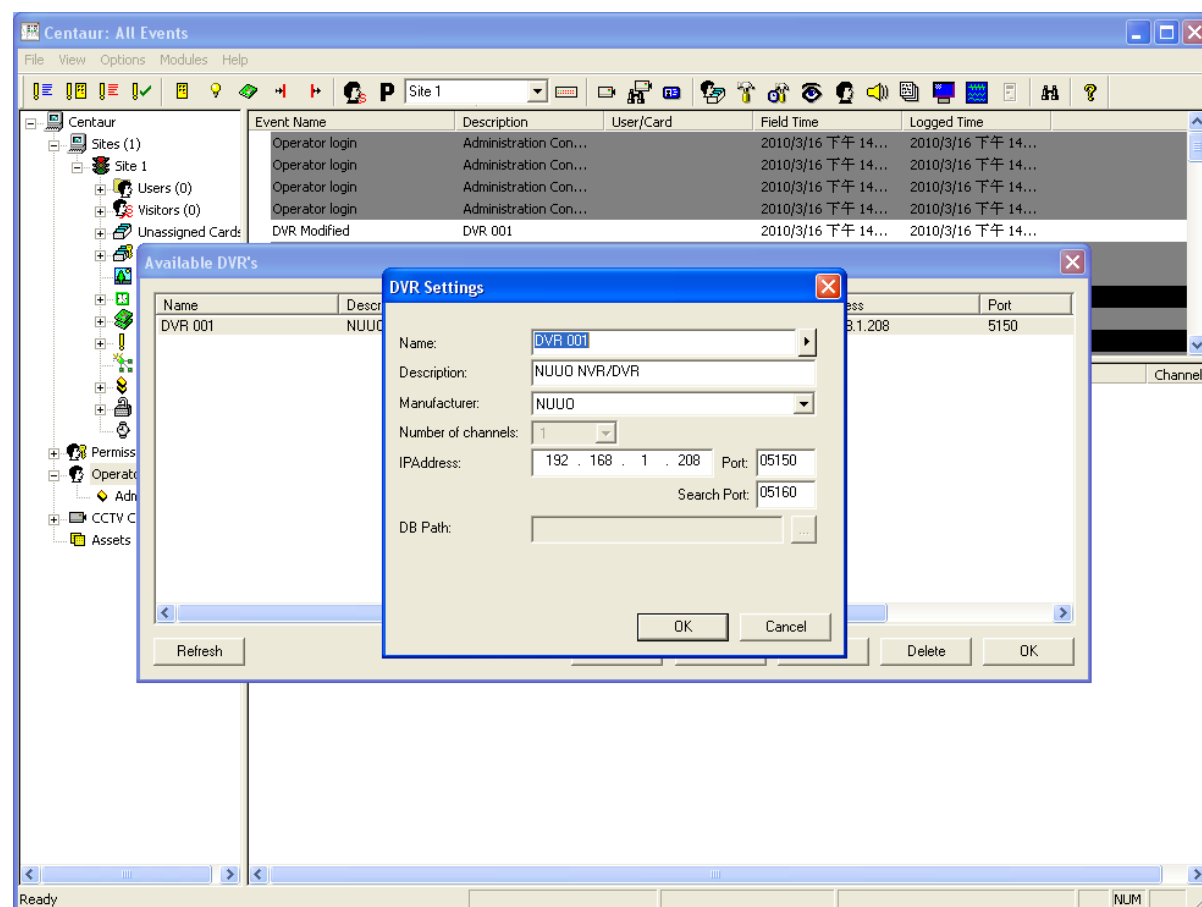

Go to Operators. Click on Properties.

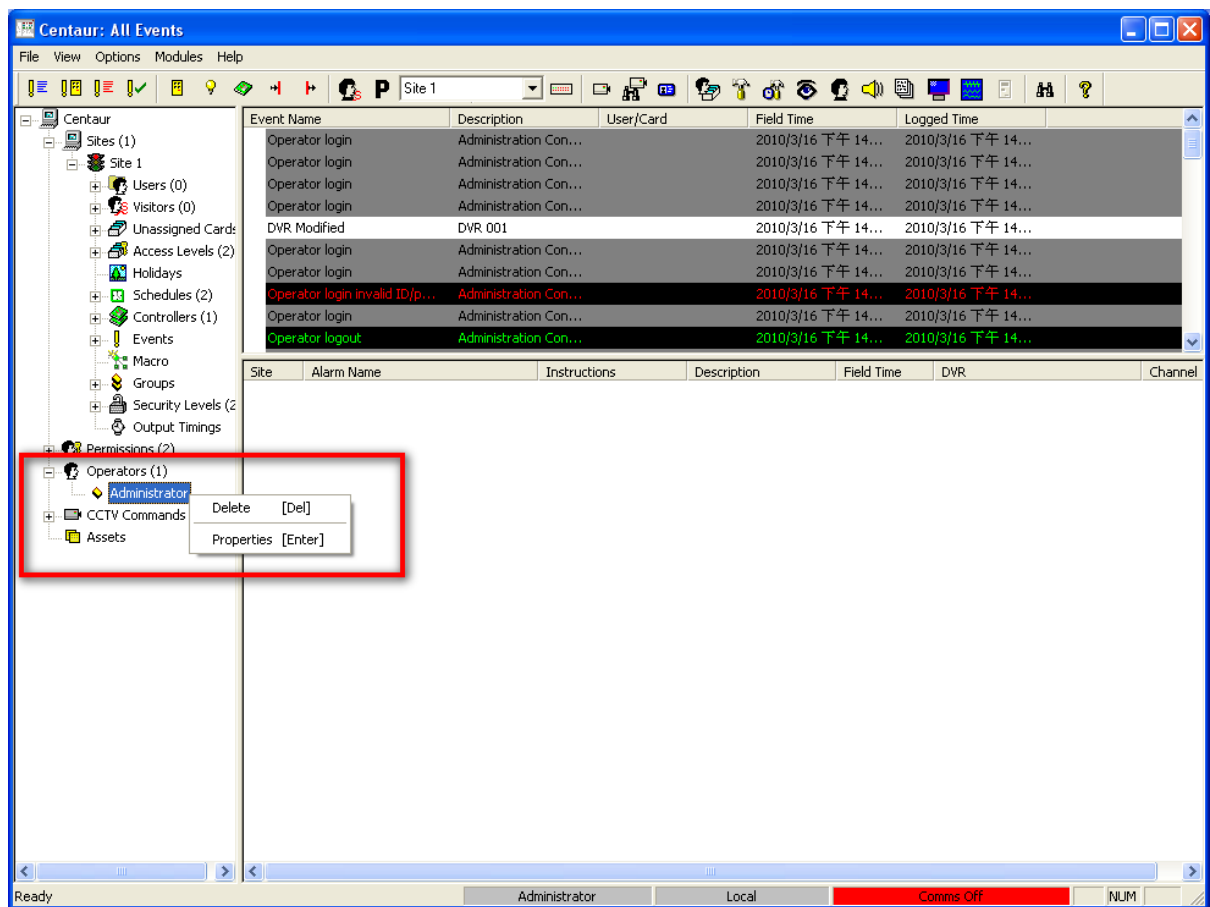

Specify the user name and password to DVR.

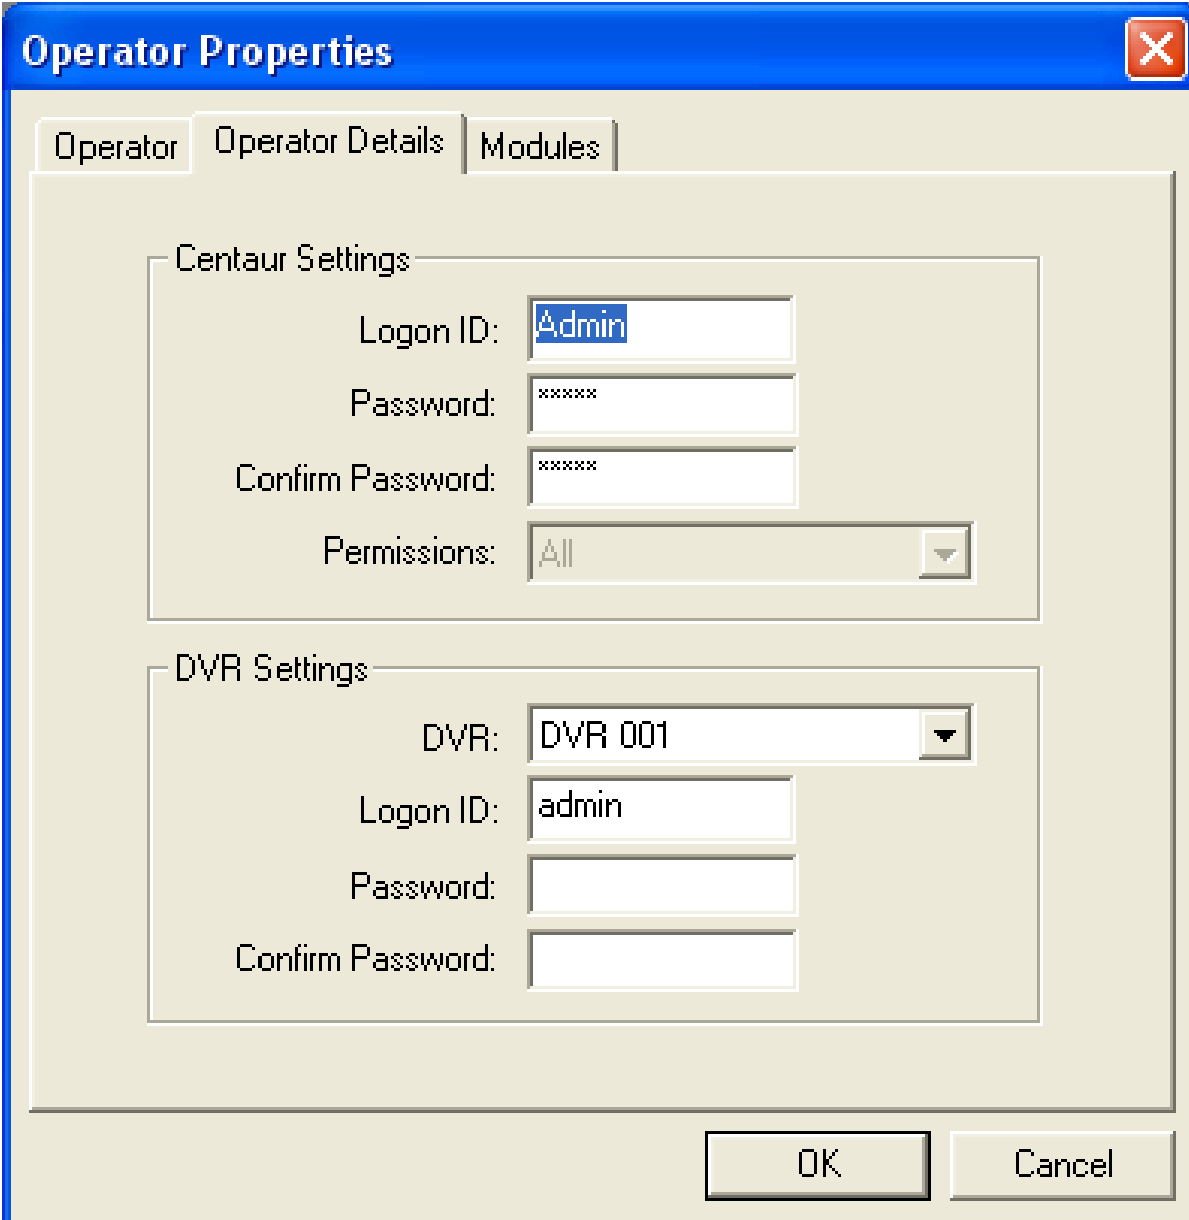

The image shows a Windows-style dialog box titled "Operator Properties" with a blue header bar and a close button (X) in the top right corner. The dialog has three tabs: "Operator", "Operator Details", and "Modules". The "Operator" tab is currently selected. Inside the dialog, there are two main sections: "Centaur Settings" and "DVR Settings".

**Centaur Settings:**


- Logon ID:
- Password:
- Confirm Password:
- Permissions:  (with a dropdown arrow)

**DVR Settings:**


- DVR:  (with a dropdown arrow)
- Logon ID:
- Password:
- Confirm Password:

At the bottom right of the dialog are two buttons: "OK" and "Cancel".

Click on live view button

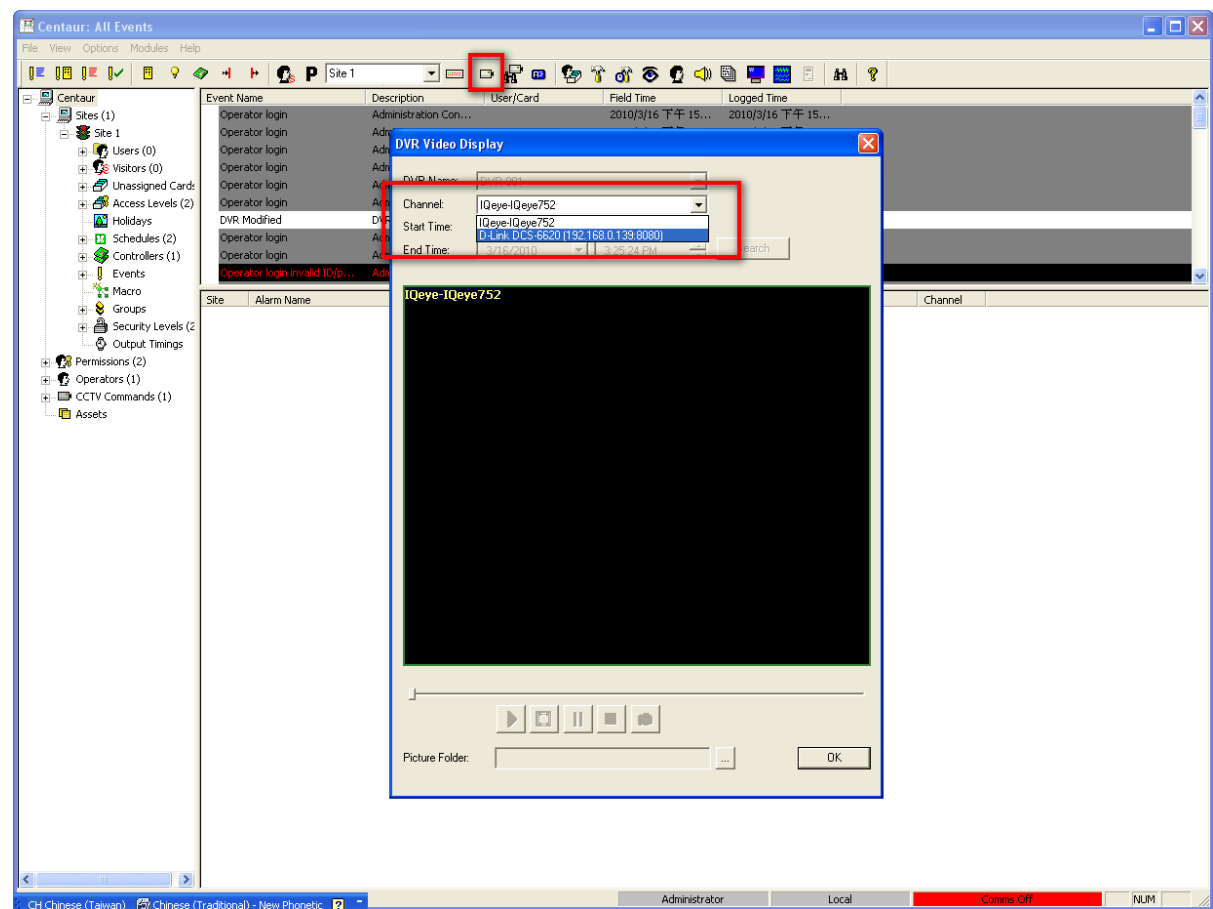


Select the camera you want and then you'll see live streaming

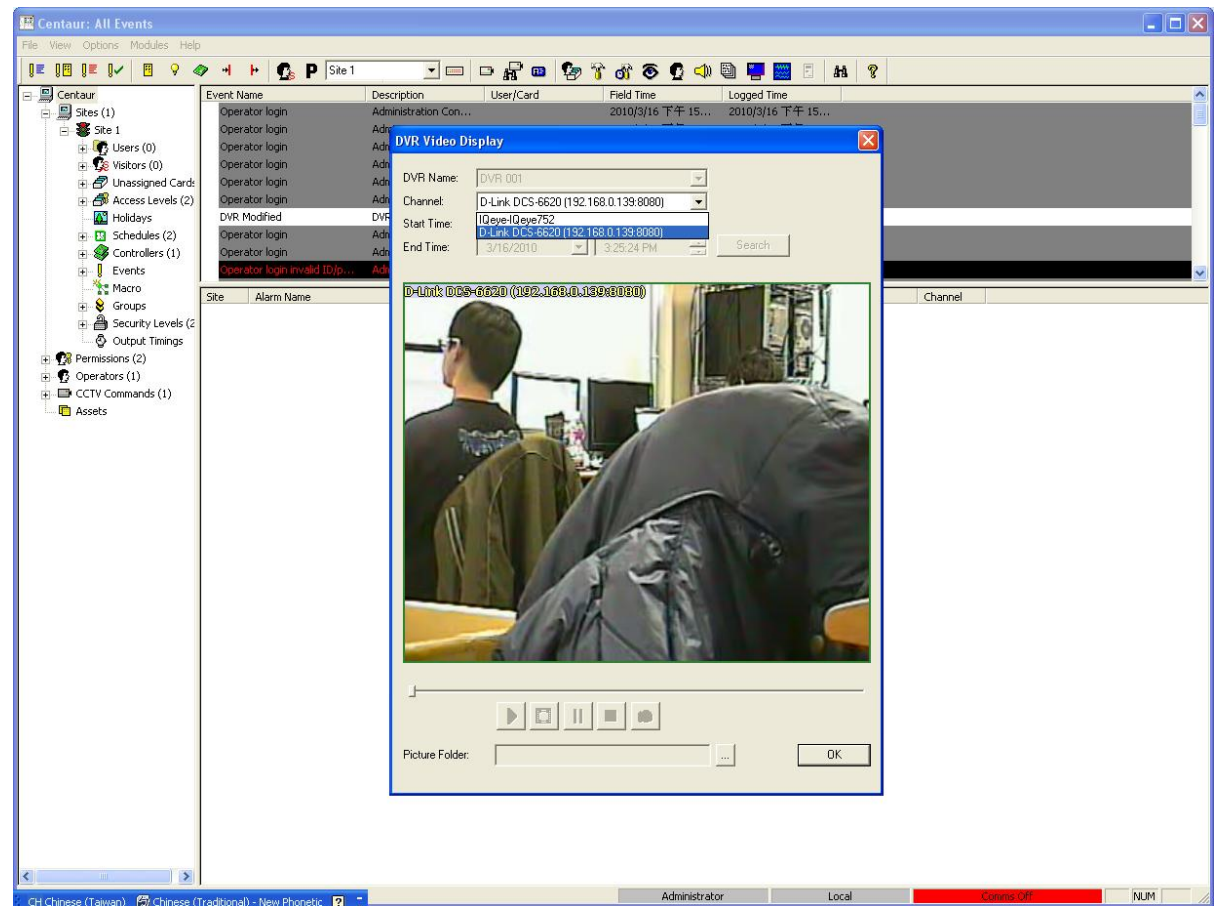



Click on playback button and give the start time and the end time

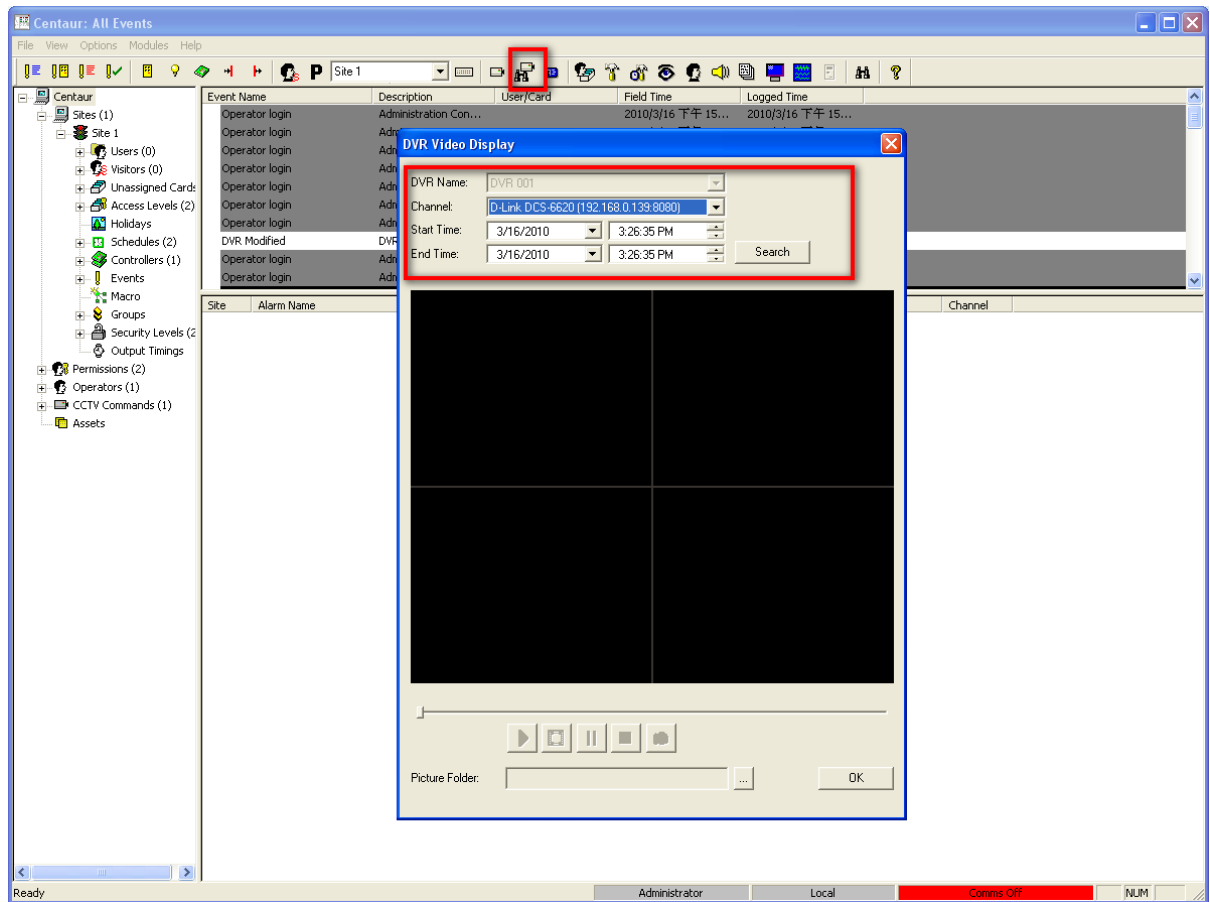

And then you can see recorded videos.

